15

Ok, we have the blue feed ramping.

The Blue Damp PS is tripping frequently @ injection
We raise its reference to perhaps make its error measurement easier
(we assume the readback is going out of the window) (.002 → .0025)
store 4

Ramp 3: Lose yellow @ transition, lose both coasters.

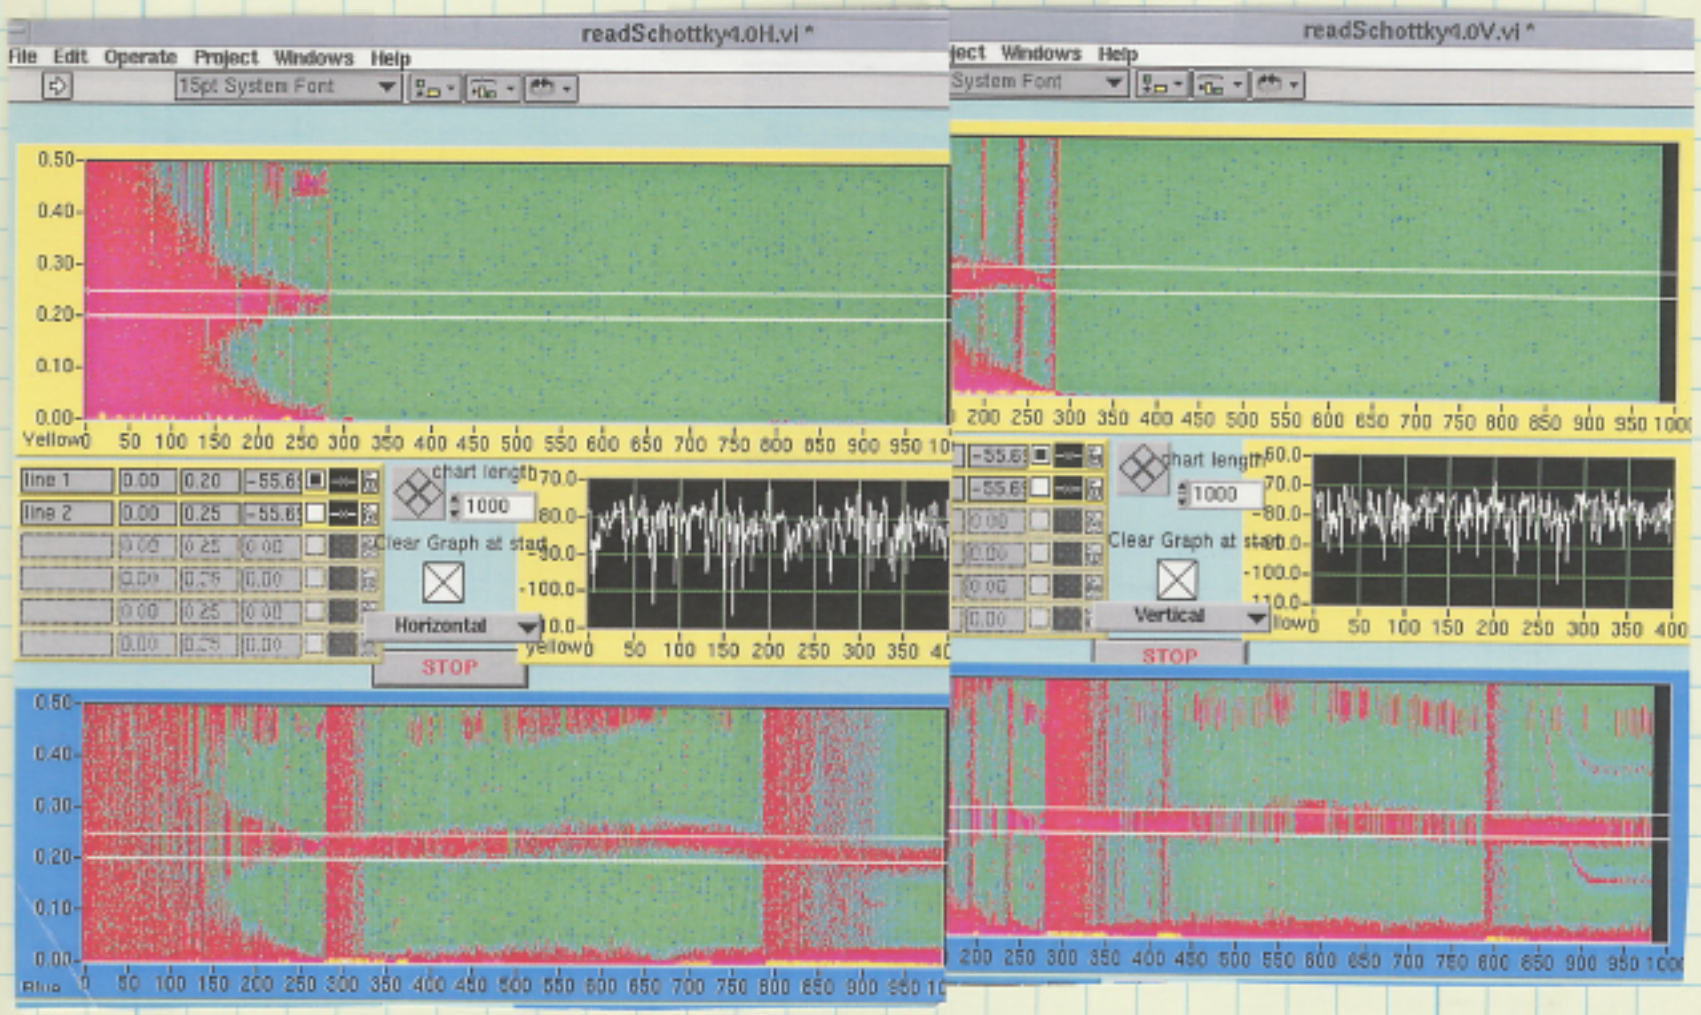

& blue loss trips @ .25 & store 22 and hits .2 @ store 27

(Blue damp still trips, raise to .003)
Trips
lower to .00175
trips
set back to .002